


**A - A**  
**Typical Cross Section (1:200)**

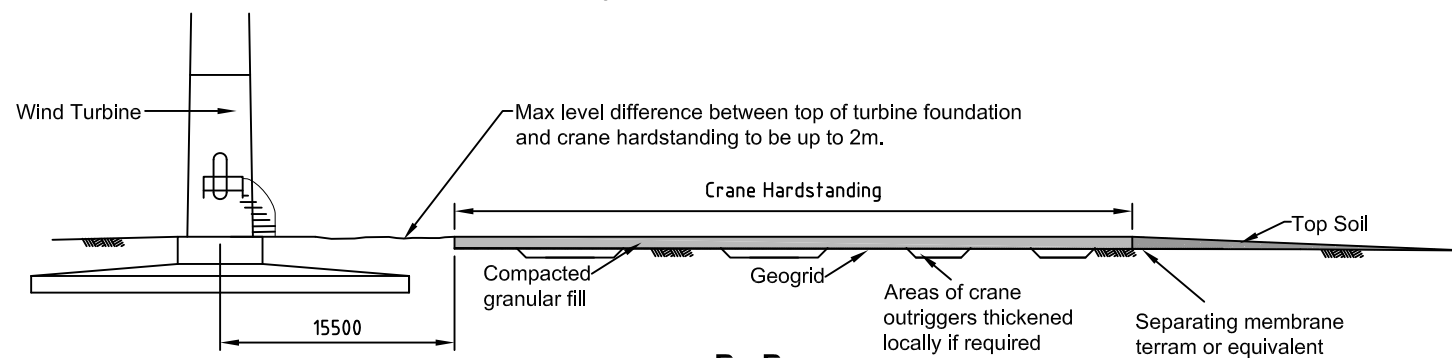

**B - B**  
**Typical Cross Section (1:500)**

**Notes:**

1. All dimensions are in millimetres.
2. Drainage to be established on site.
3. Lateral slope drainage strategy used will depend on site specific factors e.g. type of crane used.

Scale: As Shown @ A3

Client

Enoch Hill Wind Farm  
 Further Environmental  
 Information



**Figure 4.3**  
**Typical crane hardstanding**